




# GoldStar

## COLOUR TV SERVICE MANUAL


### CAUTION

BEFORE SERVICING THE CHASSIS, READ THE "SAFETY PRECAUTIONS" IN THIS MANUAL.

MODEL : CB-14A80

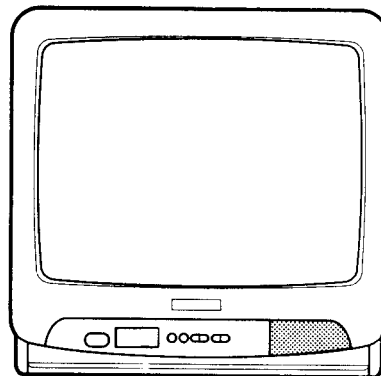

MODEL : CB-20A80

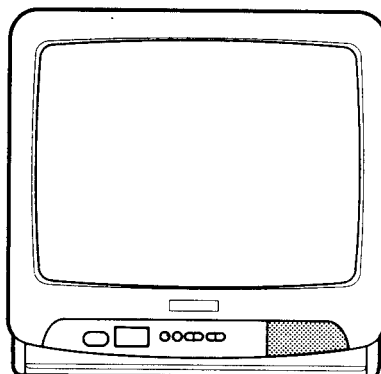


CHASSIS : PC-31A


**MODEL : CB-14A80  
CB-20A80**



# GoldStar

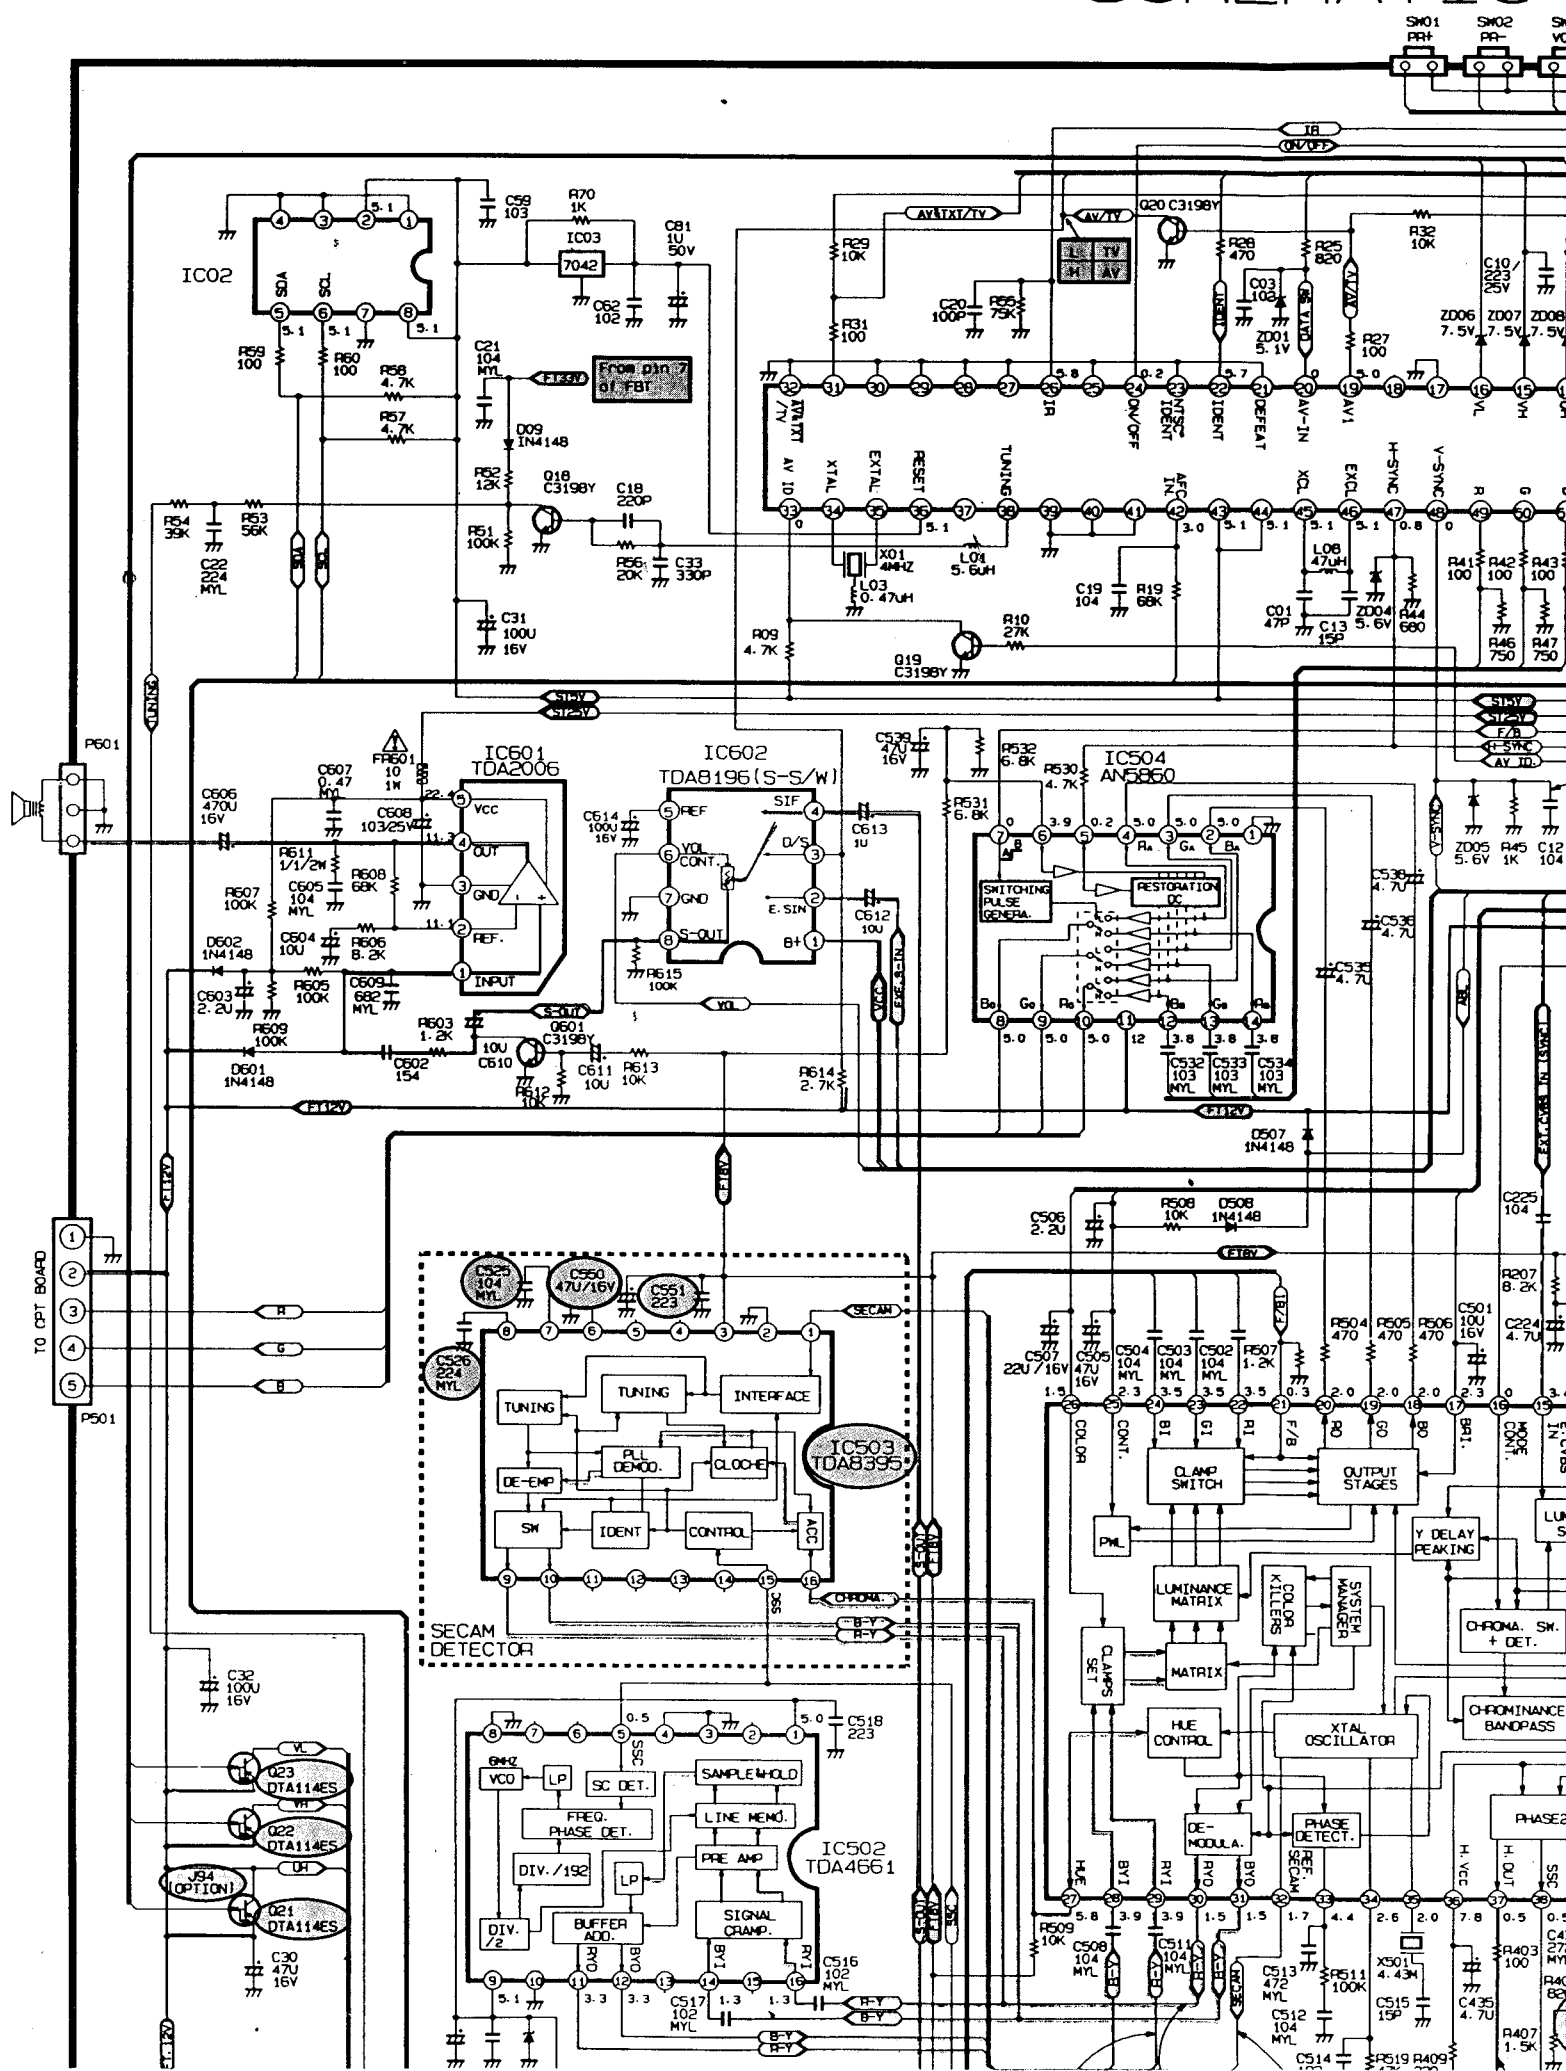

ADJUSTMENT \_\_\_\_\_

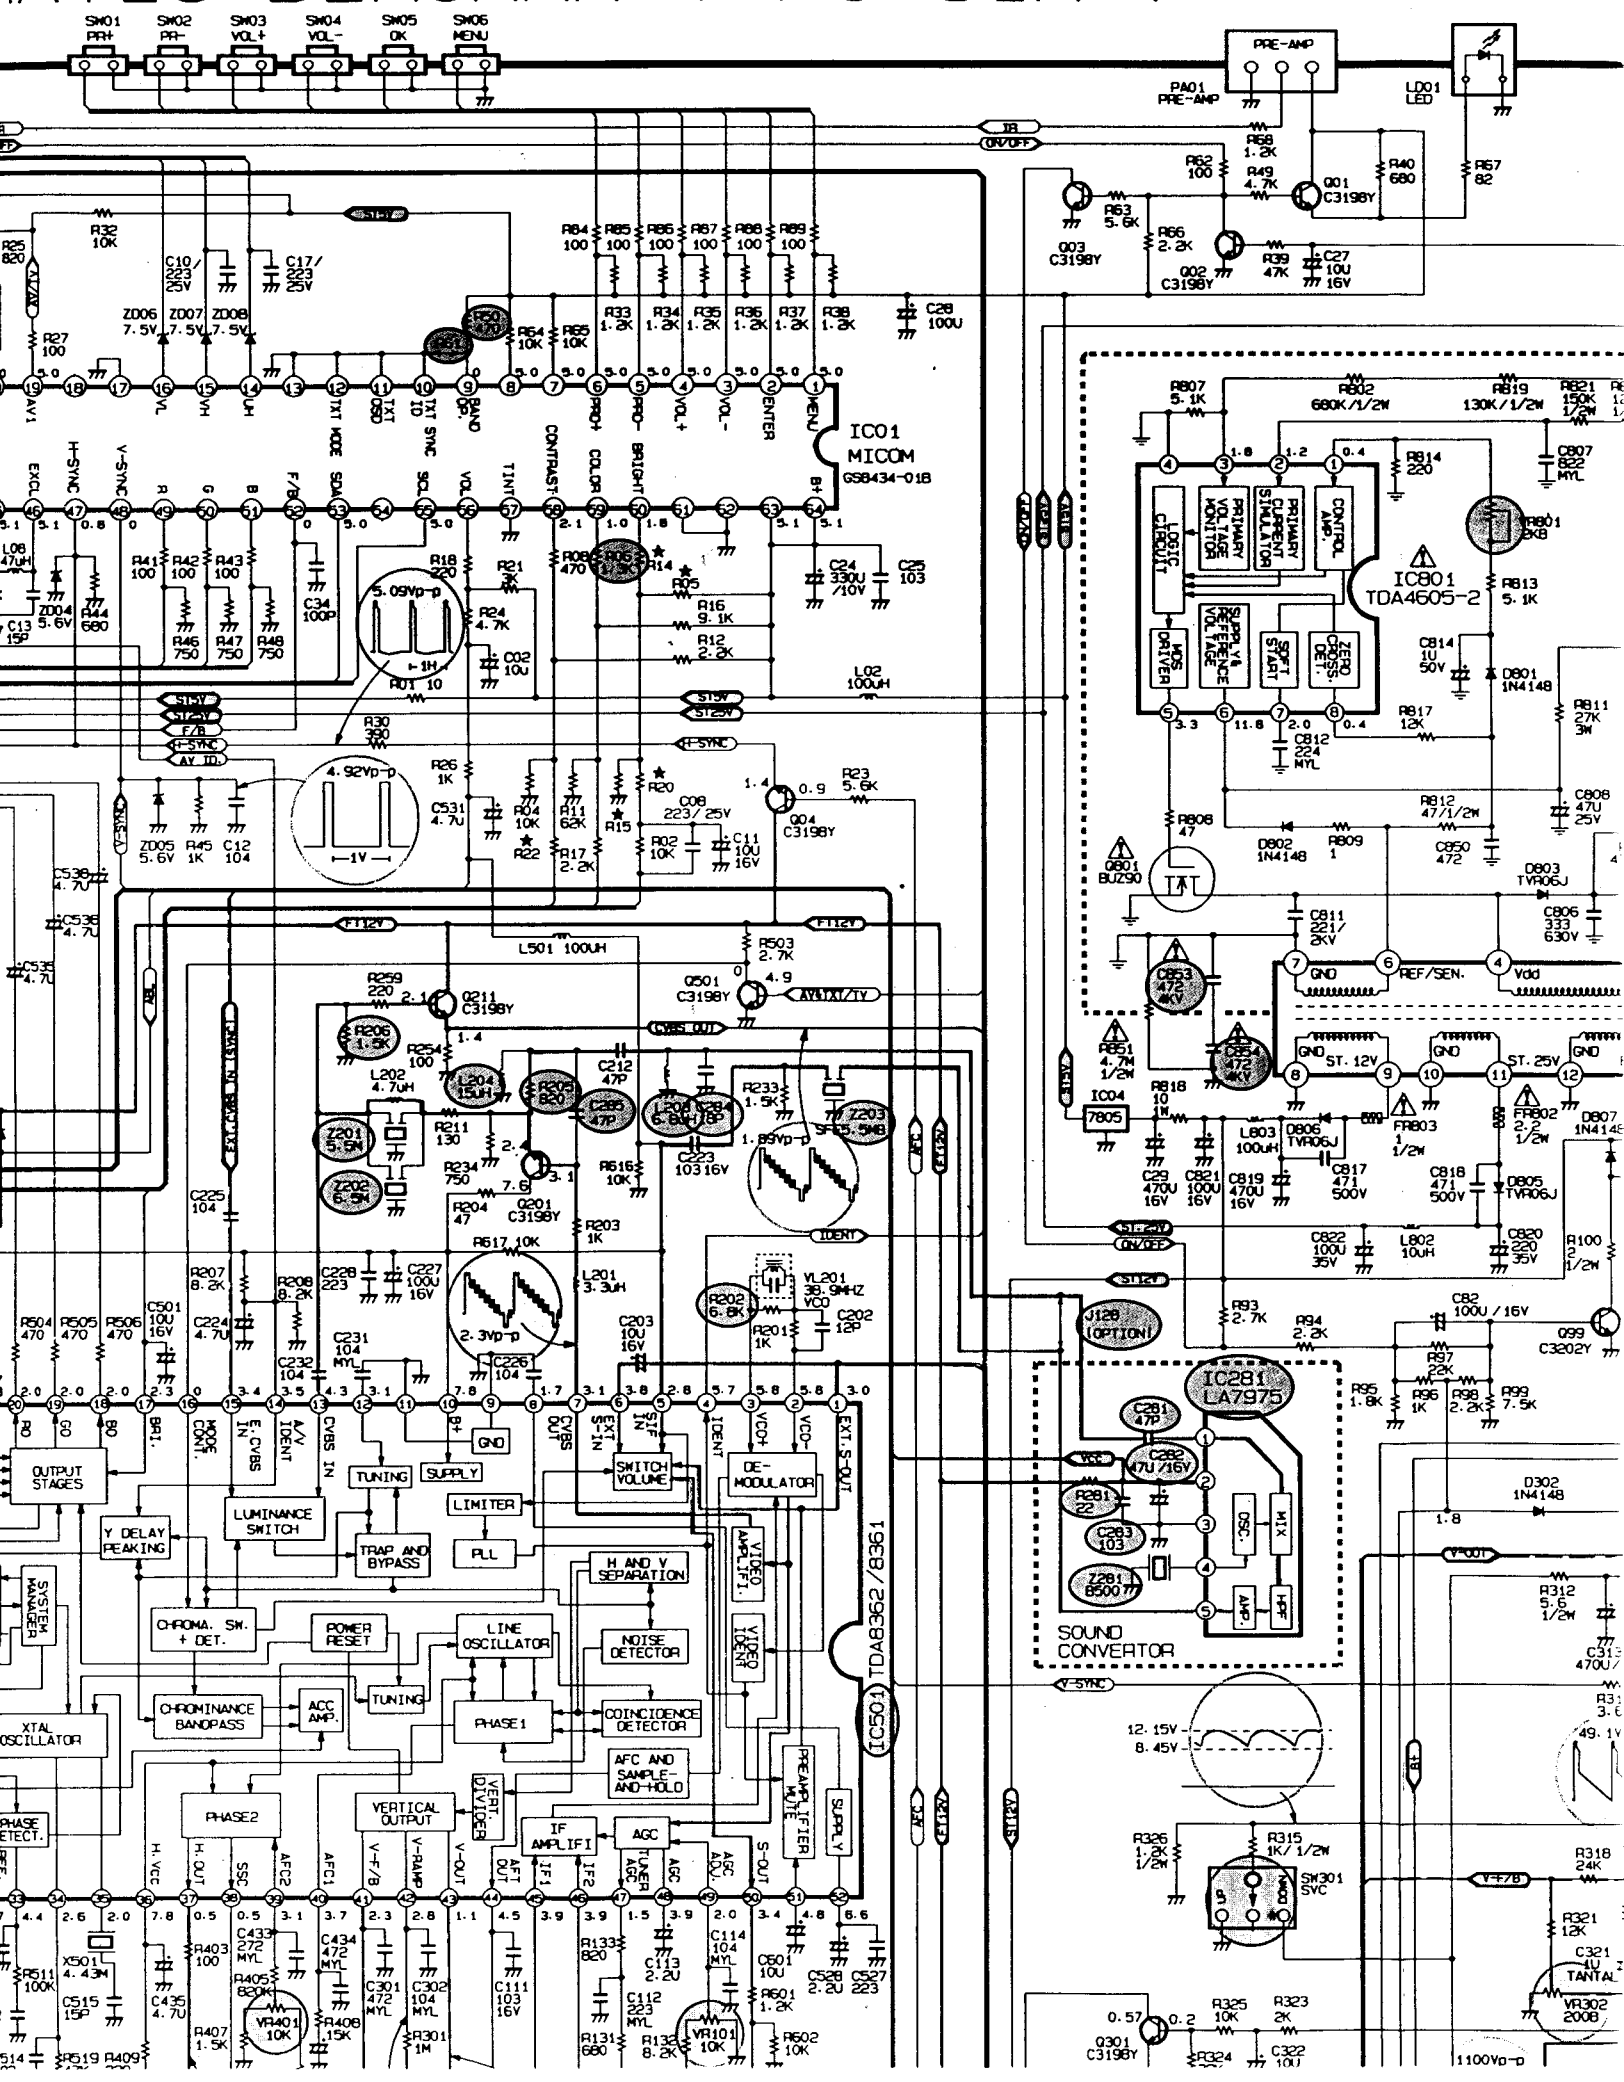






 








 
 
 

 
 

 
 
 












### ●THE TABLE OF RECEIVING SYSTEM

 	B / H	B / G	D / K	I	REMARKS
	1.5K	1.3K	1.8K	1.5K	CARBON FILM RESISTOR
	-	-	22	-	
	-	-	1.5K	-	
	6.8K	6.8K	10K	6.8K	INDUCTOR
	6.8uH	6.8uH	10uH	6.8uH	
	33uH	15uH	2.2uH	8.2uH	INDUCTOR
	TIN WIRE	TIN WIRE	47pF	TIN WIRE	CAP. TUBULAR
	-	-	47u/16V	-	CAP. CE
	-	-	103p	-	CAP. TUBULAR
	-	-	18P	-	CAP. TUBULAR
	-	-	47P	-	CAP. TUBULAR
	-	-	104J 50V	-	CAP. MYLAR
	-	-	224J 50V	-	
	-	-	47u/16V	-	CAP. CE
	-	-	0.022u/50V	-	CAP. CERAMIC
	474 250V	474 250V	154 250V	-	X-CAPACITOR
	TIN WIRE	4700/4KV	4700/4KV	TIN WIRE	Y-CAPACITOR
	2200/2KV	4700/4KV	4700/4KV	2200p/4KV	
	DIA114ES	DIA114ES	DIA114ES	-	TRANSISTOR
	DIA114ES	DIA114ES	DIA114ES	-	TRANSISTOR
	DIA114ES	DIA114ES	DIA114ES	-	TRANSISTOR
	-	-	LA7975	-	S-CONVERTOR
	TD48361	TD48361	TD48362	TD48361	JUNGLE
	-	-	TD48395/N1	-	SECAM
	G1966M	G1966M	K1950	J1953M	SAR FILTER
	TP56.5M	TP56.5M	TP56.5M	TP56.0M	
	TP56.5M	TP56.5M	TP56.5M	TP6.5M	FILTER TRAP
	5.5M	5.5M	6.0M	6.0M	FILTER BPF
	-	-	CSB900	-	RESONATOR
		238B	238D	238E	TUNER
	238B	238C	238F	-	TUNER (HYPER BAND)
	-	-	-	TIN WIRE	
	TIN WIRE	TIN WIRE	-	TIN WIRE	
	-	-	-	470	
	TIN WIRE	TIN WIRE	TIN WIRE	-	
	820	820	-	820	

 ●TEXT LANGUAGE & MODE OPTION  
FOR U-COM IC(IC01)


FUNCTION	LANGUAGE		MODE		REMARKS
PIN NO.	WEST	EAST	TOP/FLOF	FLOF	
PIN 11	LOW(0)	HIGH(1)	-	-	LOW(0) : GND
PIN 12	-	-	HIGH(1)	LOW(0)	HIGH(1): 5V

## ● KEY MATRIX TABLE


OUTPUT PIN NO.		9	10	11	12	13	15	16	17
INPUT PIN NO.									
21		7	6	5	4	3	2	1	0
22								9	8
23				DOWN 	UP 	DOWN 	UP 		
24			SEARCH 	DOWN 	UP 				
25			SLEEP 	OK 					
26					FINE- 	FINE+ 			
27		RED 	GREEN 		CYAN 		YELLOW 		
1			SERVICE KEY 		MENU 				


## NOTICE

Since this is basic circuit diagram, the value of components and some partial connection are subject to change for improvement.

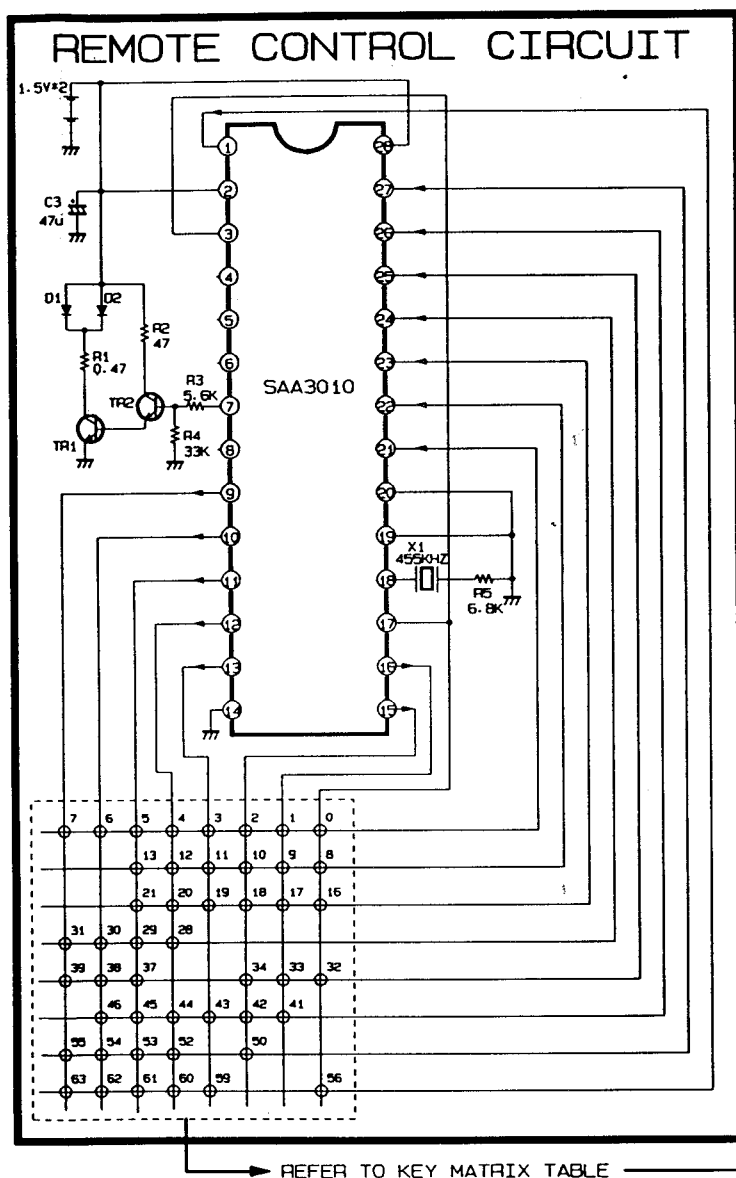



TION)



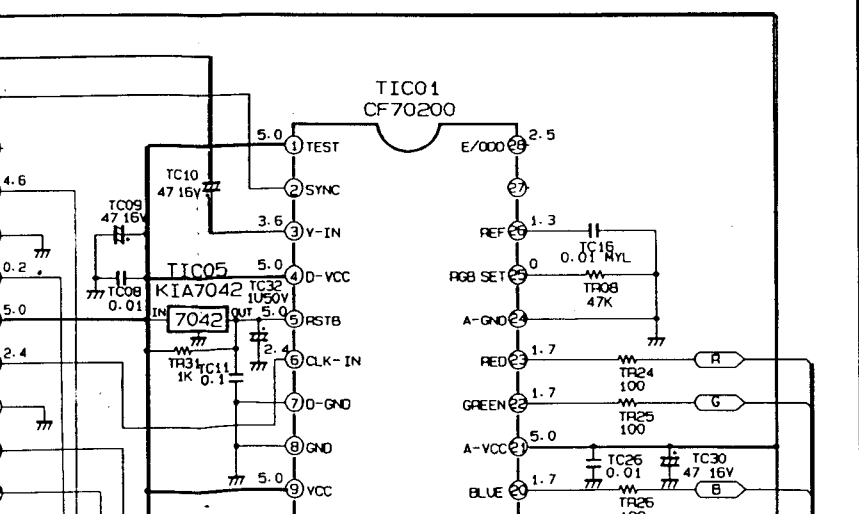


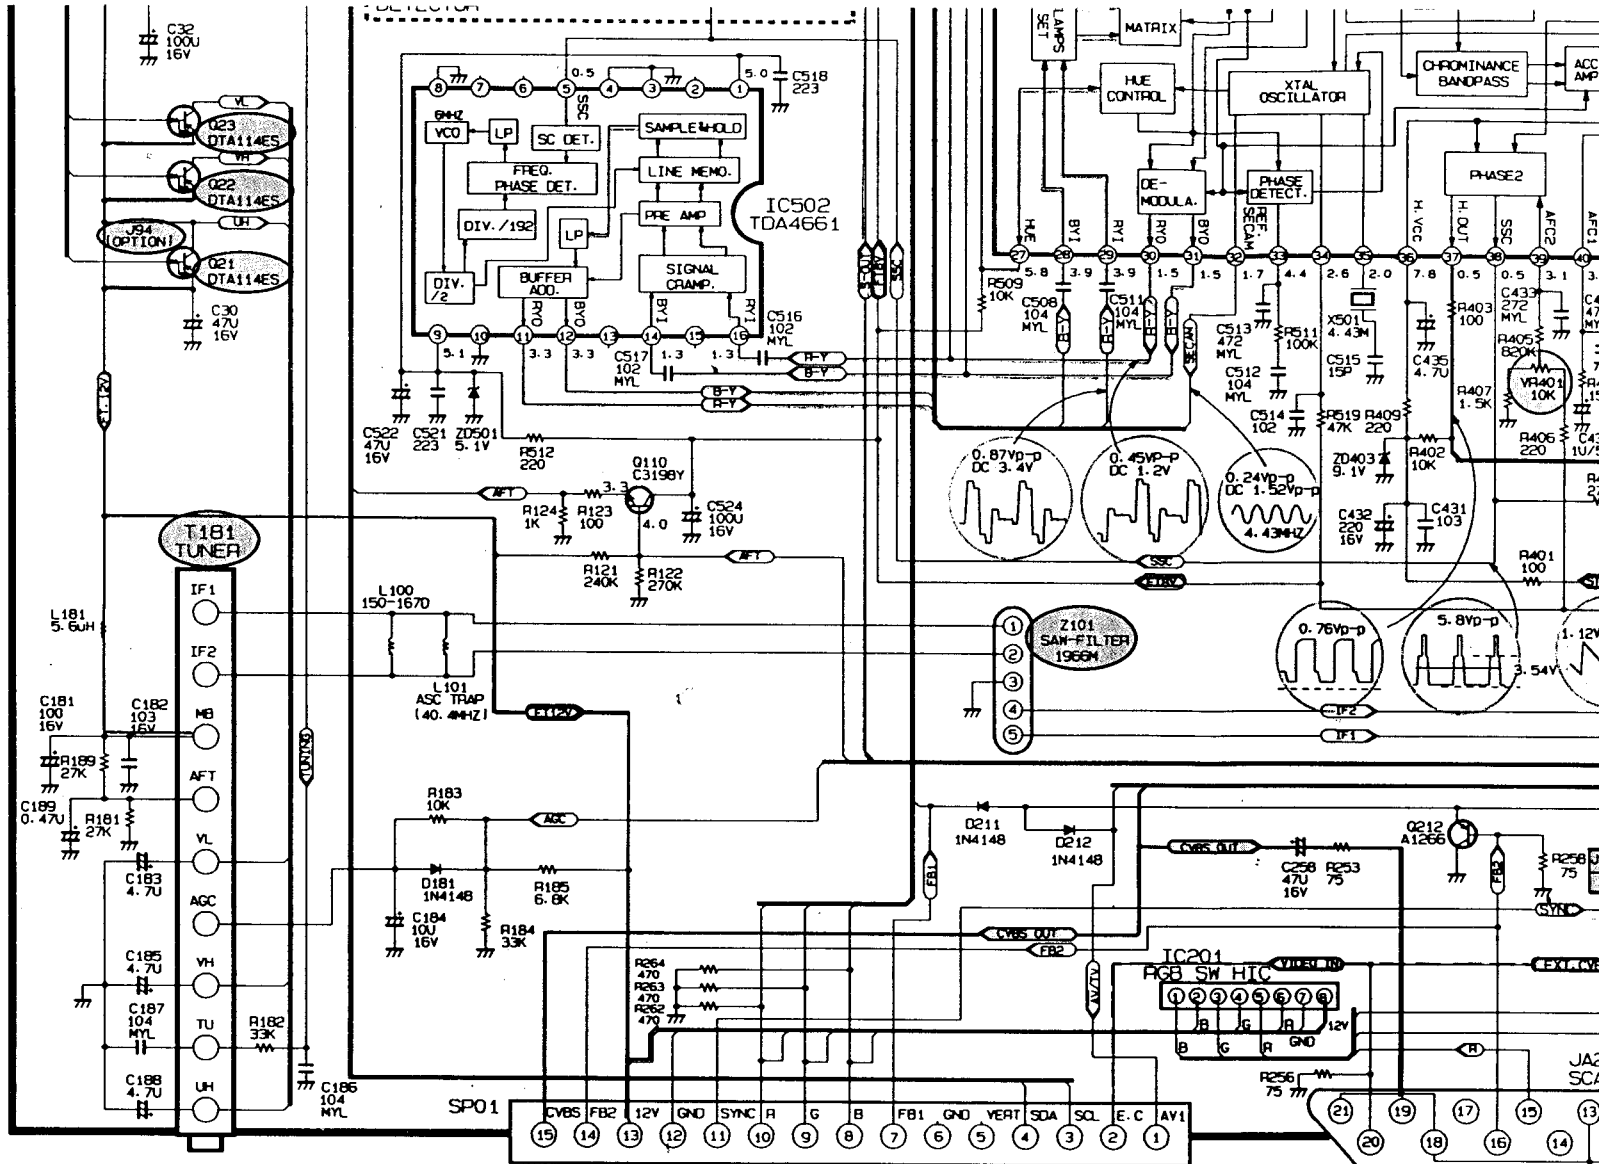

## ■ Troubleshooting Guide



PRESET CONTROL  
 Brightness - Fully Up  
 Contrast - Fully Up  
 Colour - Fully Up  
 Volume - Mid range or  
 adjust as need

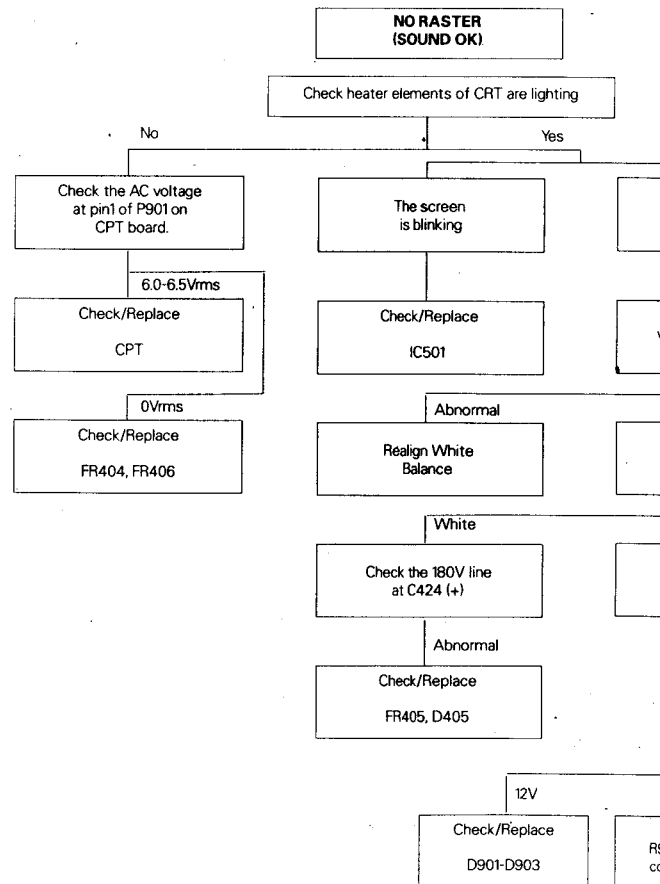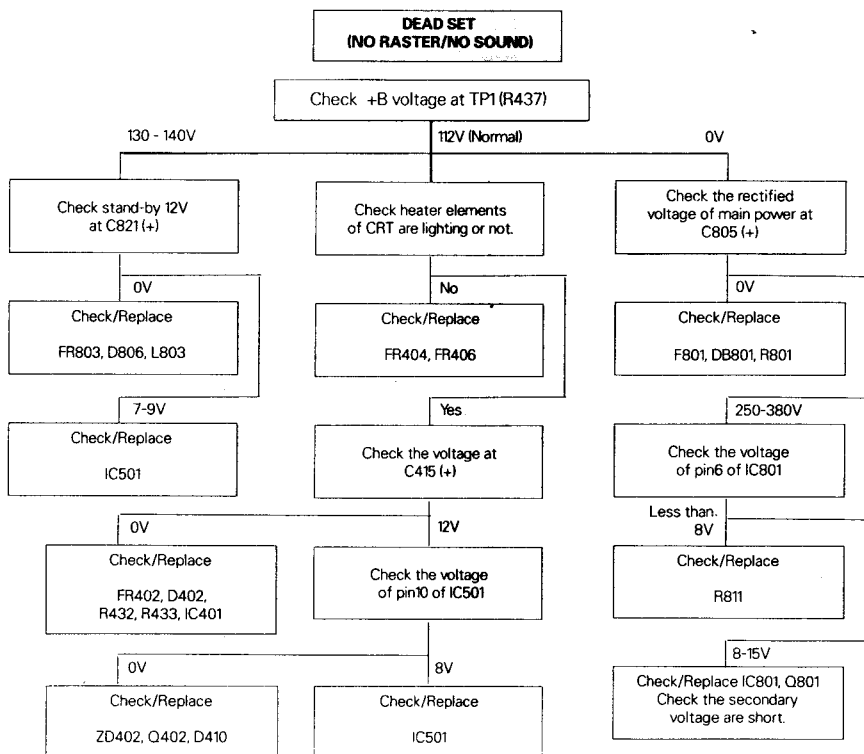

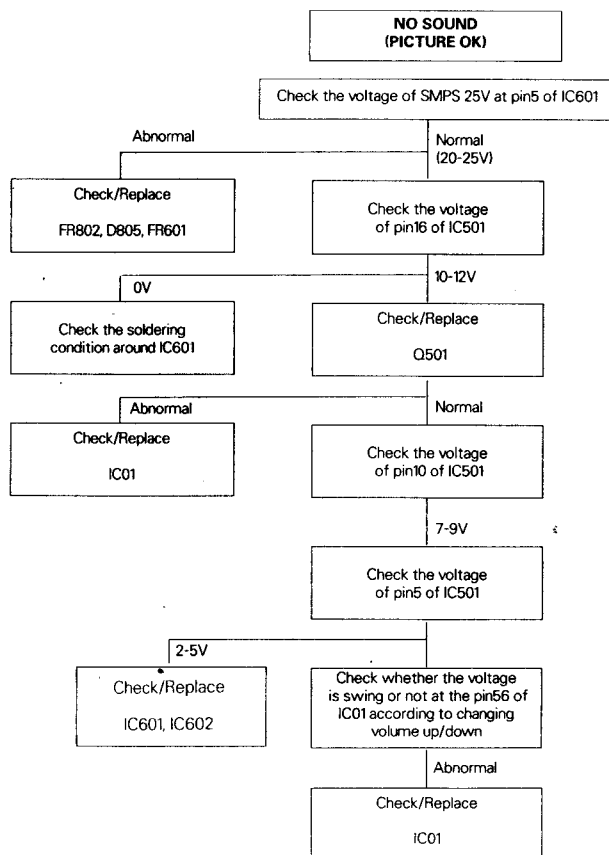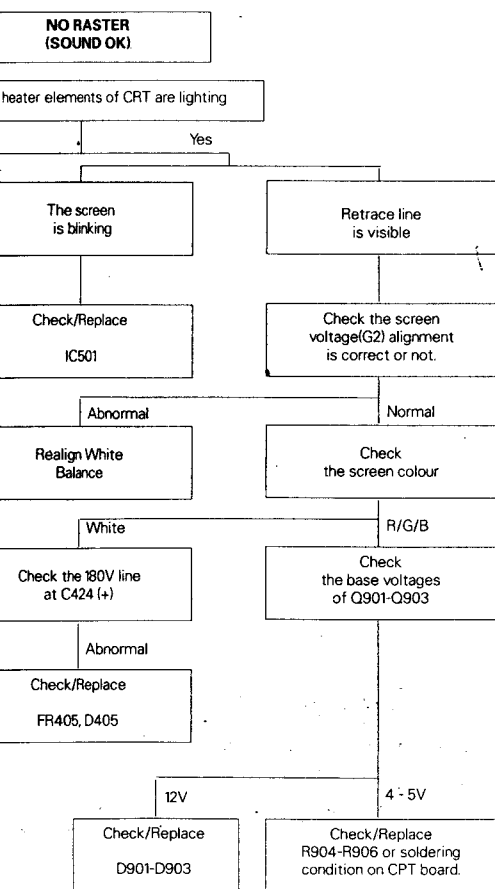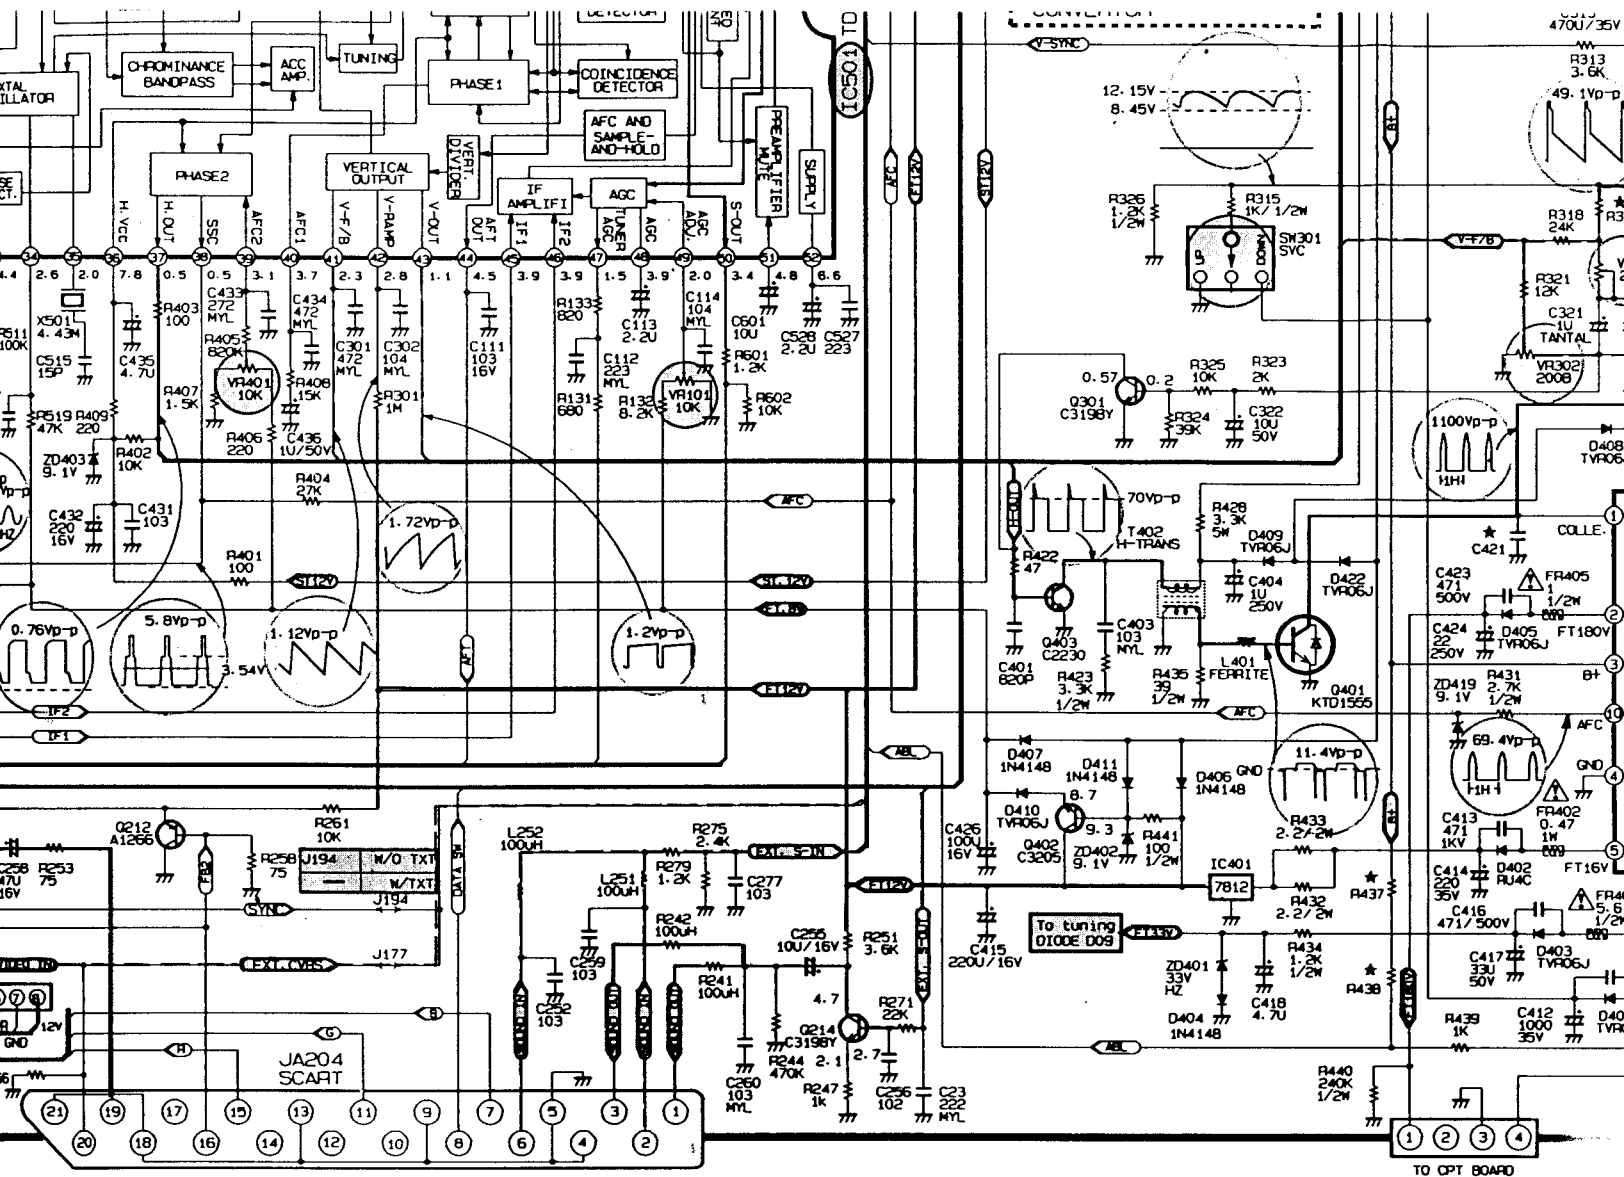

**NOTE:**  
Sound is muted whenever the screen is noise condition, that is, broadcasting signal is not found.

Check/r  
X50

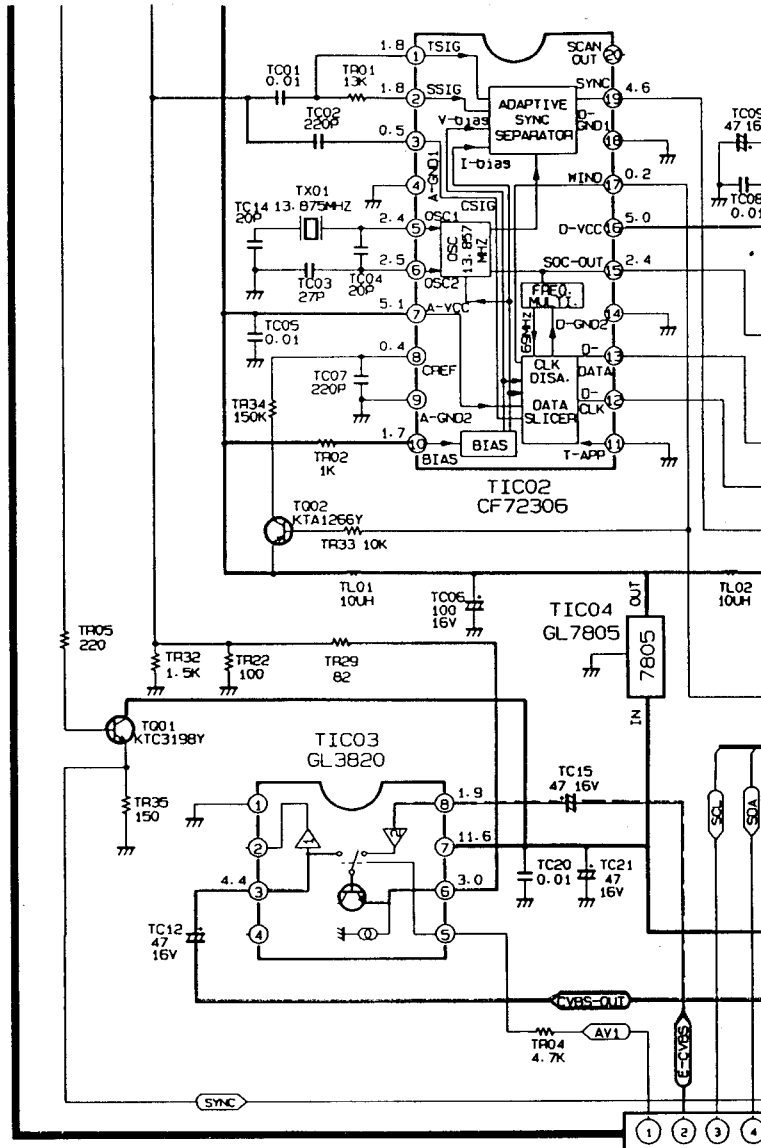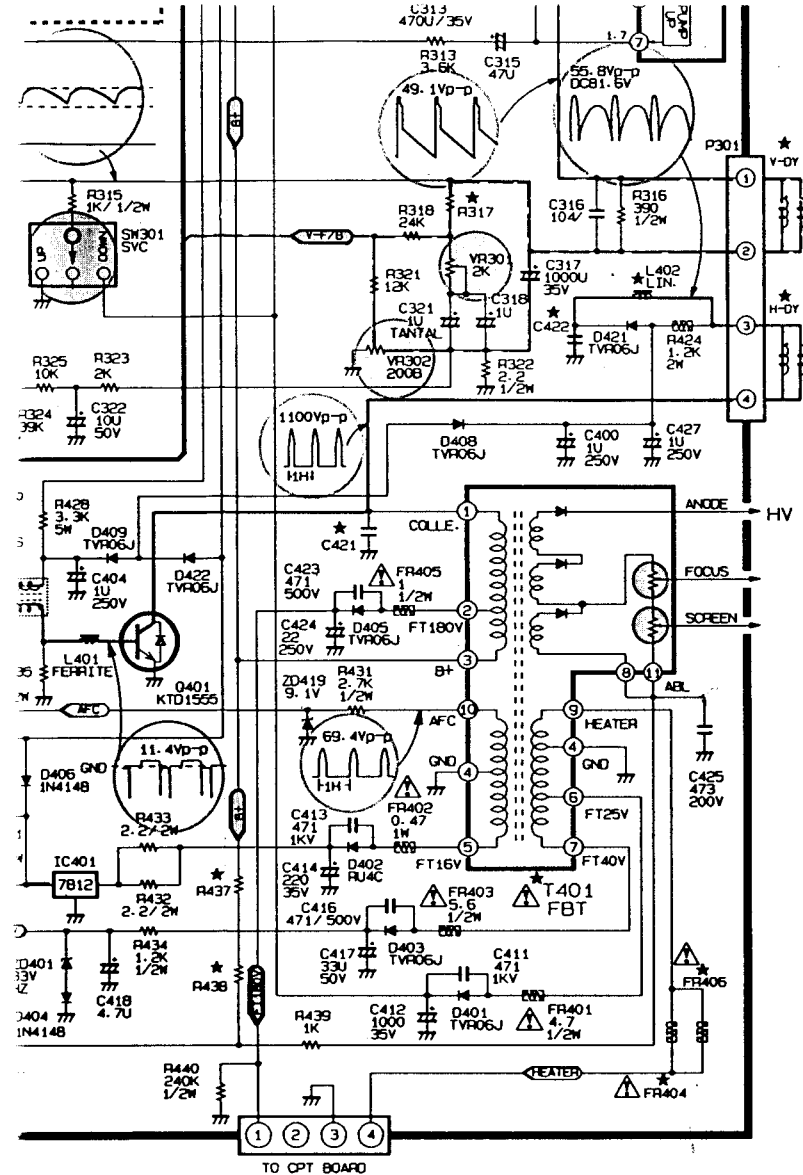

NO COLOUR

Check the frequency(4.4Mhz) at pin35 of IC501

Abnormal  
Check/replace  
X501

Normal  
Check the voltage  
of pin27 of IC501

Below 5V  
Check/Replace  
IC501

OVER 5.5V  
Check whether the voltage is  
swing or not at the pin59 of IC01  
according to changing colour  
up/down.

Not  
Check/Replace  
IC01

Swing  
Check whether R-Y and B-Y  
are out at pin30 and pin31  
of IC501

Not  
Check/Replace  
IC501

Swing  
Check whether R-Y and B-Y  
are out at pin9 and pin10  
of IC503

No  
Check/Replace  
IC503

Yes  
Check whether R-Y and B-Y  
are out at pin11 and pin12  
of IC502

No  
Check/Replace  
IC502

Yes  
Check whether R/G/B is out  
at pin20 and pin19 and  
pin18 of IC501

No  
Check/Replace  
IC501

NOTE  
Sound is muted whenever the  
screen is noise condition, that  
is, broadcasting signal is not  
found.



NO

Check

118-122

Check/Replace  
Tuner



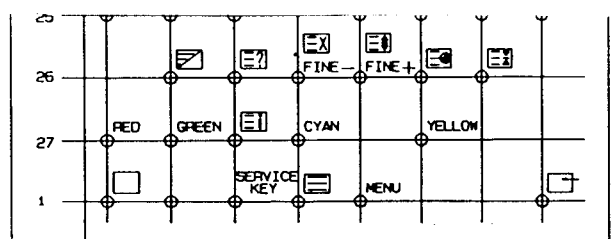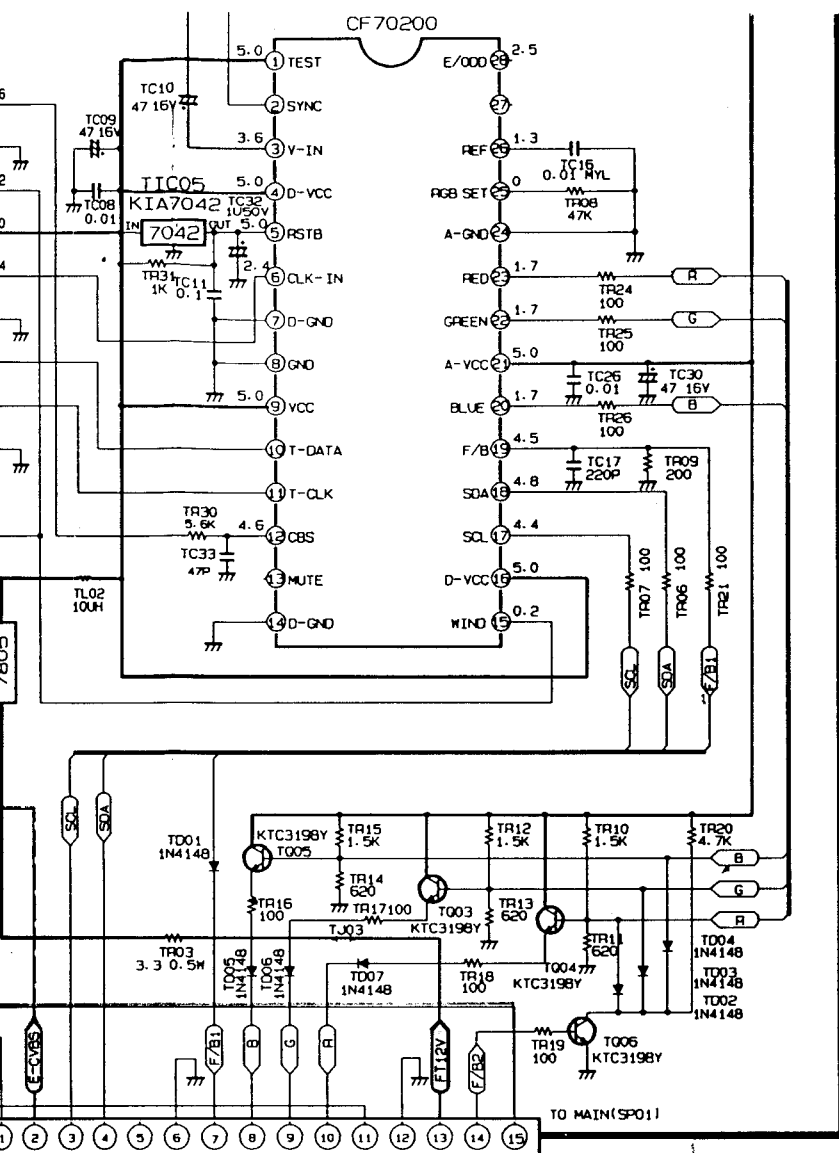

## NOTICE

Since this is basic circuit diagram, the value of components and some partial connection are subject to change for improvement.


The components marked  $\Delta$  conform to VDE or IEC guidelines and are essential for safe operation of the set. While those marked  $\Delta$  are required for correct operation. Use specified parts only when replacing.

## Value of resistor, capacitor and inductor

1. Resistances are shown in ohm, K=1,000, M=1,000,000.
2. Unless otherwise noted in schematic, all capacitor values less than 1 are expressed in mfd and the values more than 1 in pF.
3. Unless otherwise noted in schematic, all inductor values more than 1 are expressed in uH and values less than 1 in Henry(H).

## Observation of voltages and waveforms

1. Voltages with VTVM from point to chassis ground, line voltage is 230Vac +/- 20% volts, (240Vac +/- 20% in ENGLAND, AUSTRALIA, NEWZEALAND) Signal pattern is colour-bar.
2. The schematic shown is representative only.
3. All waveforms are taken using a wide band oscilloscope and a low capacity probe.
4. Check Fine tuning, AGC, Brightness, Contrast and Colour controls for best picture, make sure that colour, brightness are in mid-position and contrast is in 75%.


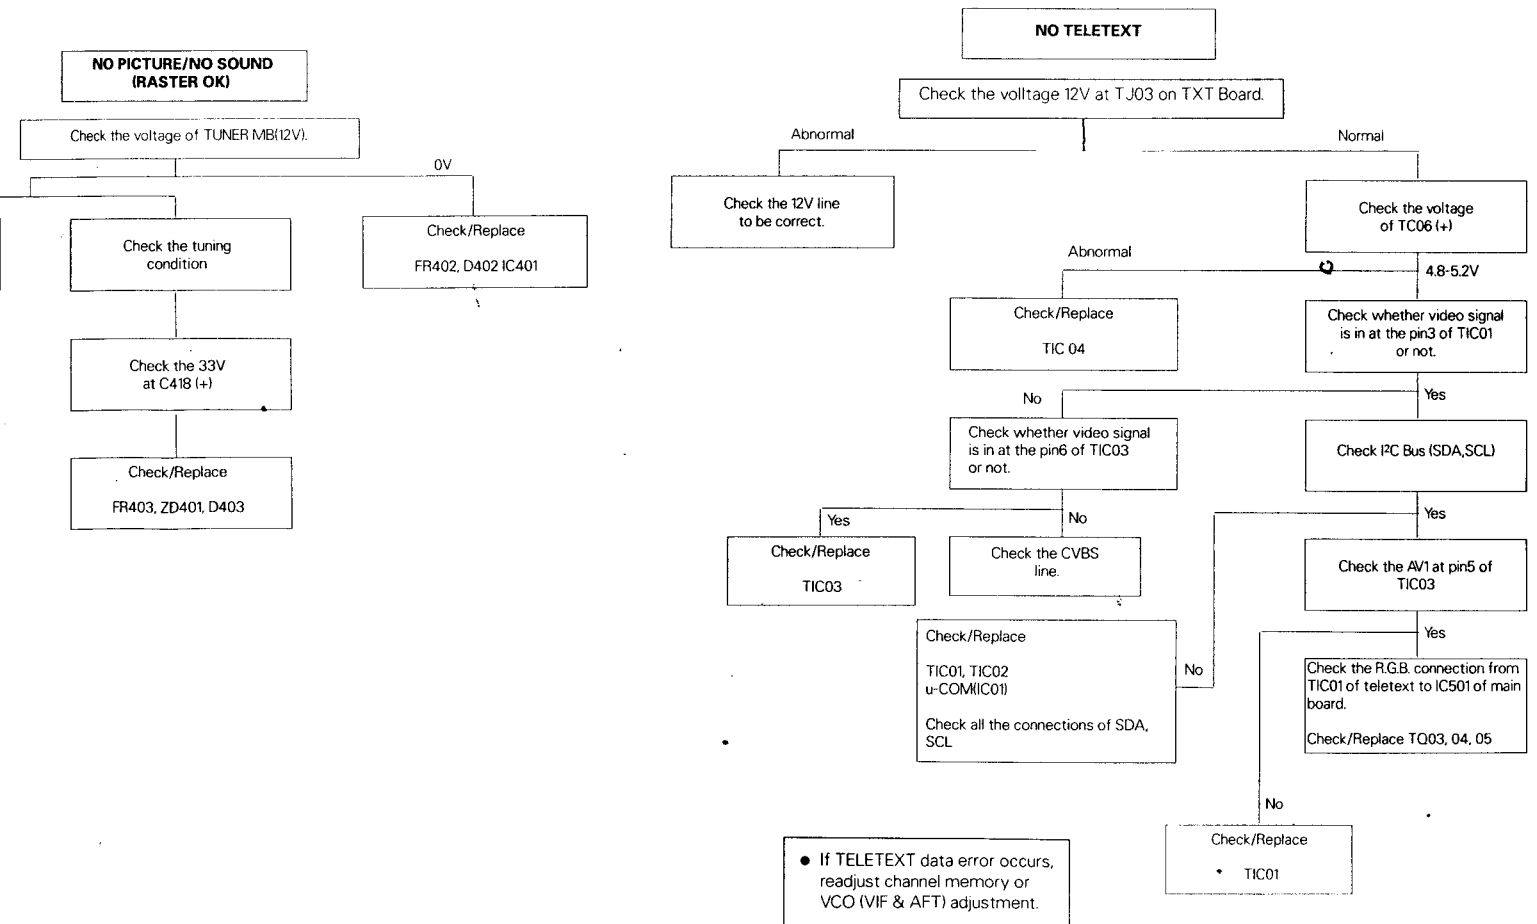


1. It is safe to adjust after using insulating transformer between the power supply line and chassis input to prevent the risk of electric shock and protect the instrument.
2. Never disconnect leads while the TV receiver is on.
3. Don't short any portion of circuits while power is on.
4. The adjustment must be done by the correct appliances. But this is changeable in view of productivity.
5. Unless other-wise noted, set the line voltage to  $230V \pm 2\%$  50/60hz.

1. VIF sweep generator
2. Color bar/cross-hatch pattern generator
3. DC power supply (24V) X 2
4. Digital multi-meter
5. Oscilloscope

Adjust : VR 801


1. Connect the measuring equipment to the TV as shown Fig

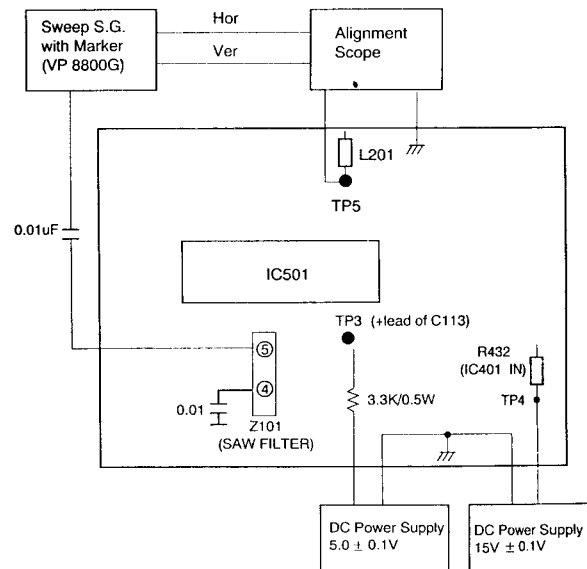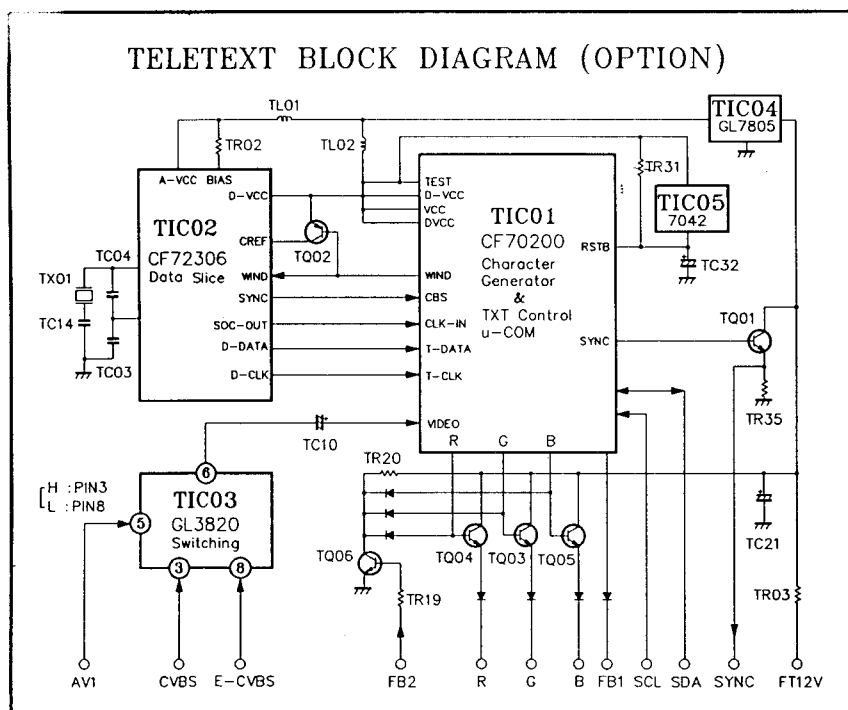


## Alignment/Test Point Location Guide





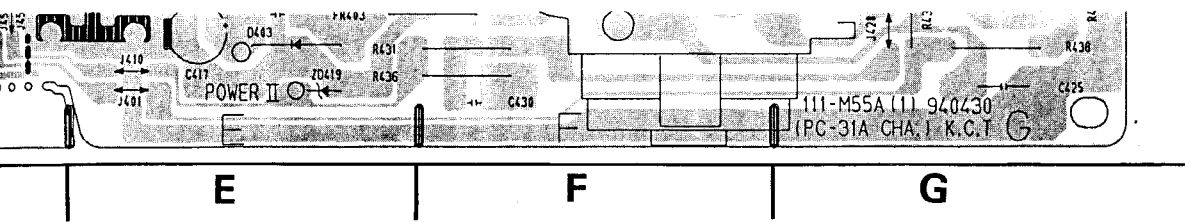

## CPT Board (14")

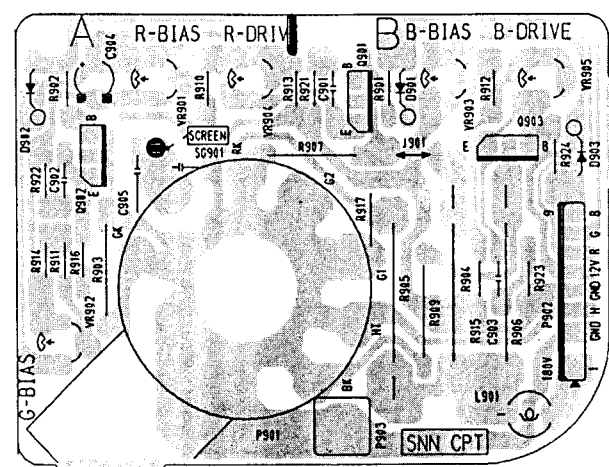

PCB P/N	Adoption	Remarks
111-N01A	14 inch, SNN CPT (for CKD MODEL)	<ul style="list-style-type: none"> <li>Main parts Location are all the same.</li> <li>There are two kinds of CPT Board, one for SNN CPT(14"), the other for HiFo CPT (20", 21").</li> </ul>
111-M92A	14 inch, SNN CPT (for complete set)	
111-N22A	20", 21" inch, HiFo CPT (for CKD MODEL)	
111-M55A	20", 21" inch, HiFo CPT (for complete set)	

## Wiring Diagram

